EZ Start Plus App Screens

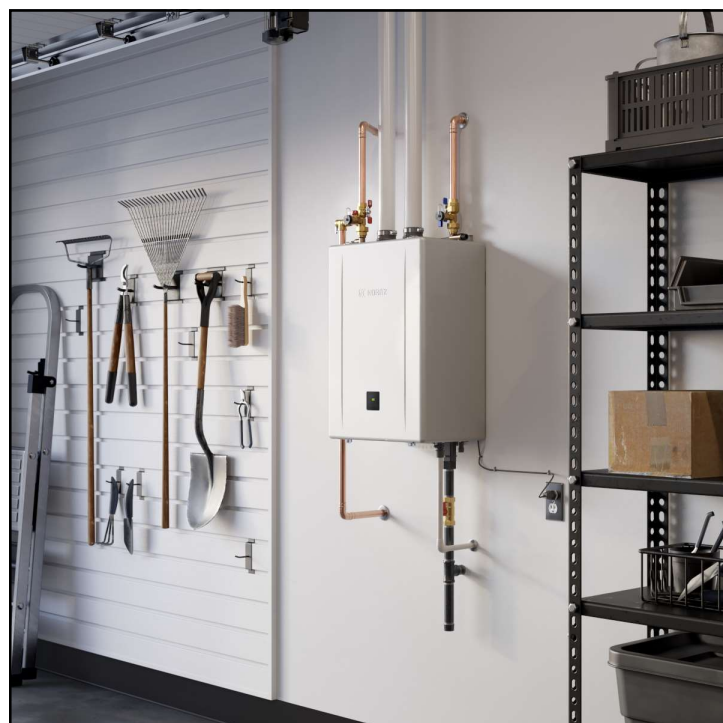Available for EZ Series Pro, NRCR Pro, and CDV Pro models only.

OUTLINE

- EZ Start Plus App
  - Programming the Unit
  - Built In Display
  - Initial Set Up of the App
  - Field Gas Conversions
  - Unit Settings
  - Saved Settings
  - User Settings
  - Recirc Timer Settings
  - Error Code History
  - Maintenance Monitors
  - Trial Operation

NORITZ®

EZ START PLUS APP

Initial unit setup, temperature adjustment and maintenance can all be handled through the new EZ Start Plus Bluetooth App!

The App will walk you through setting up the unit upon completing installation and provides an easy way to register the unit for your customers.

Error Code History can be accessed and will link you directly to help articles related to any error codes stored.

3

PROGRAMMING THE UNIT

Pro Series units no longer have physical dipswitches on the circuit board. All programming of the unit is done with the new EZ Start Plus App or the built-in display window.
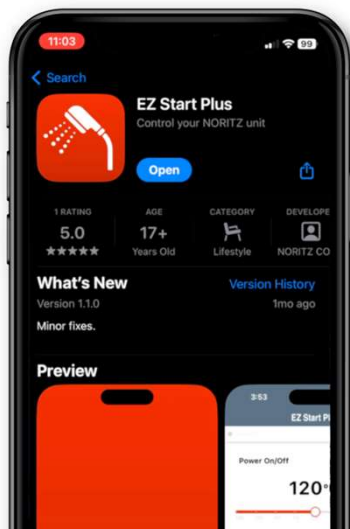
Directions can be found in the manual
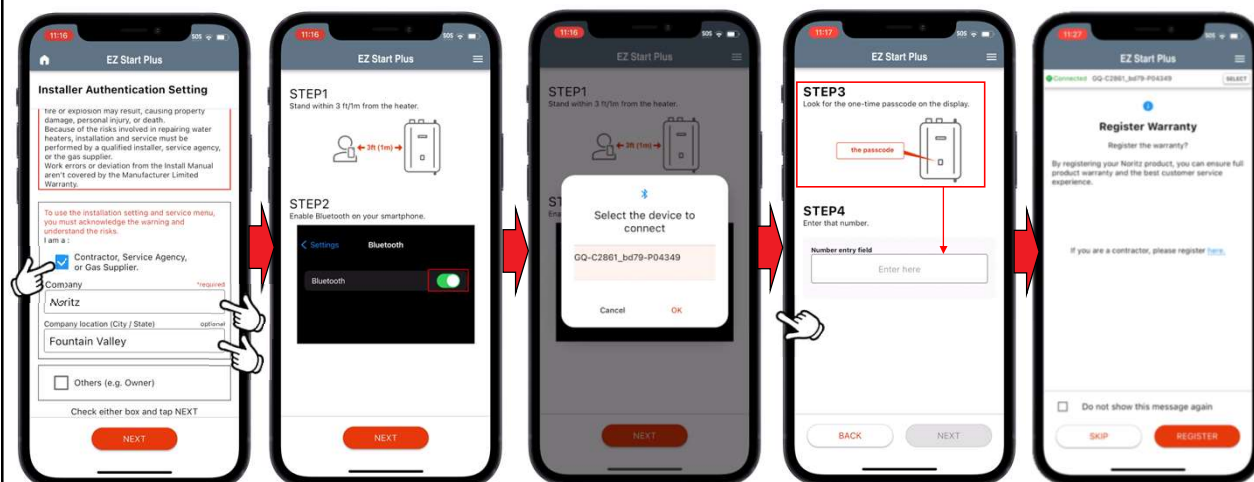
4

BUILT IN DISPLAY WINDOW

Displays temperature setting, service reminders and error codes. Also allows you to view maintenance monitors, error code history and change installation settings. The new display window makes the remote control a truly optional item.

NORITZ®

5

INITIAL SETUP

| Open EZ Start Plus App and select Contractor | Make sure Bluetooth is ON | Select Unit then tap OK | Enter Passcode and tap "NEXT" | Register Warranty or skip |

If you select Other (e.g. Owner) the Unit Settings and Trial Operation Functions are disabled
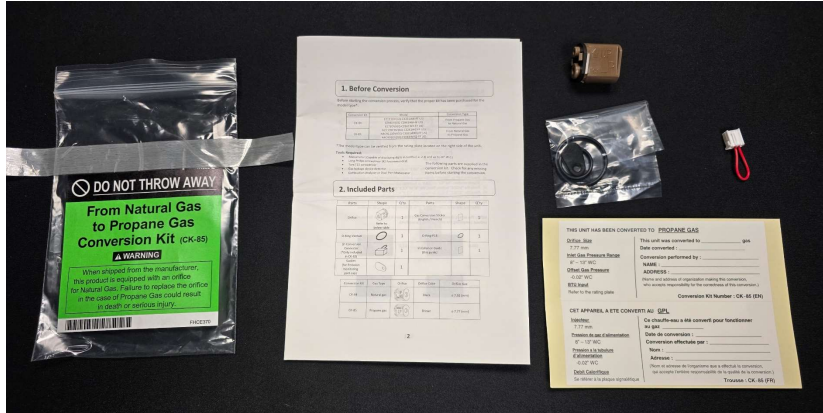
NORITZ®

6

FIELD GAS CONVERSION

All Pro Series models are ready to be used with NG. If the jobsite has LP, a simple field gas conversion can be performed without the need to purchase any additional parts. Conversion is **EZ** and can be done in about 5 minutes.

Conversion Kit taped to top of unit
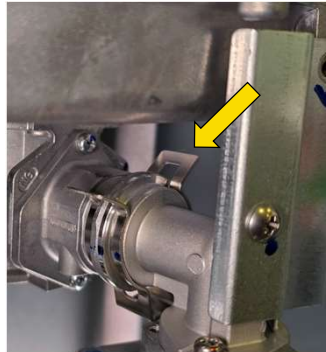
Contents of LP Conversion Kit
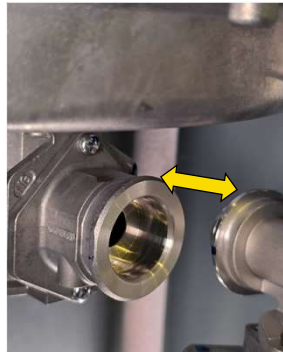

NORITZ®
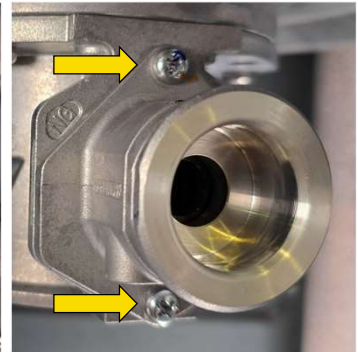
FIELD GAS CONVERSION

Scan Here!

Step 1	Step 2	Step 3	Step 4

| Remove screw | Remove the c-clip | Carefully remove gas fitting | Remove 2 screws securing venturi fitting |

NORITZ®

FIELD GAS CONVERSION

Step 5	Step 6	Step 7	Step 8
Remove NG orifice	Insert LP orifice *(make sure o-ring and gasket aren't lost or damaged)*	Secure venturi fitting	Insert gas fitting, secure c-clip and screw

NORITZ®

9

FIELD GAS CONVERSION

NORITZ®

Step 9	Step 10 (continued): Changing gas type to LP with EZ Start Plus App			

Plug in LP conversion connector

Built in display can also be used to convert gas type, see gas conversion directions included with unit

Tap "Unit Setting"	Tap "Convert Gas Type"	Tap Change Setting, Tap LP then tap "DONE"	After a few seconds it should show complete

10

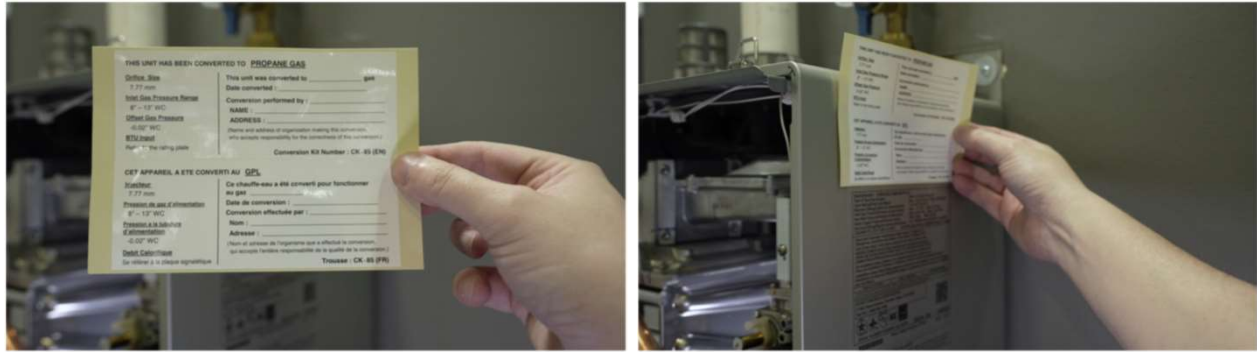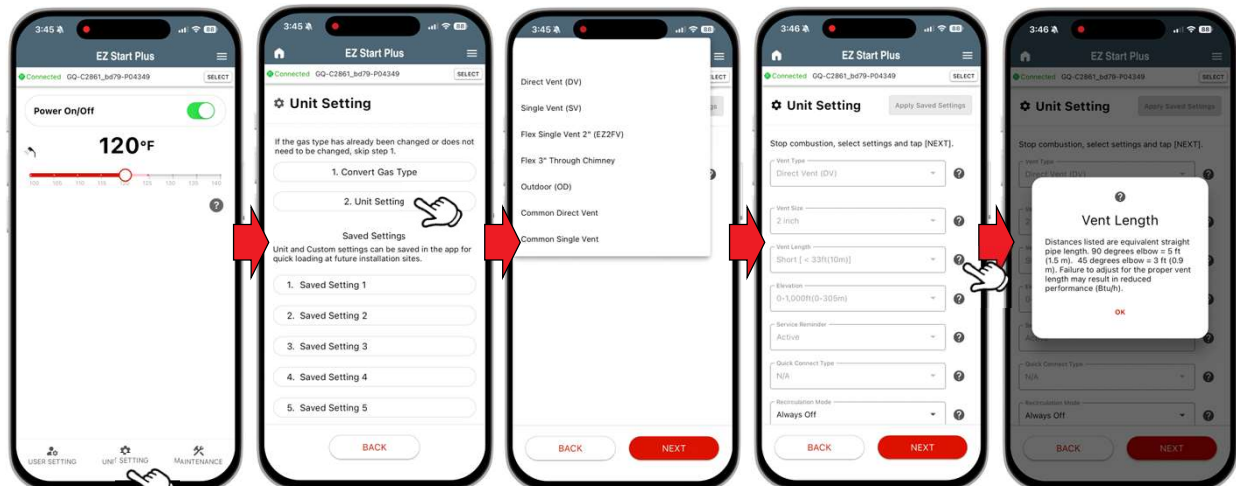# FIELD GAS CONVERSION

MAKE SURE TO FILL OUT AND ATTATCH GAS CONVERSION STICKER TO UNIT

11

UNIT SETTINGS

Tap "Unit Setting"

Tap "2. Unit Setting"

Select Options Based on Installation then tap NEXT

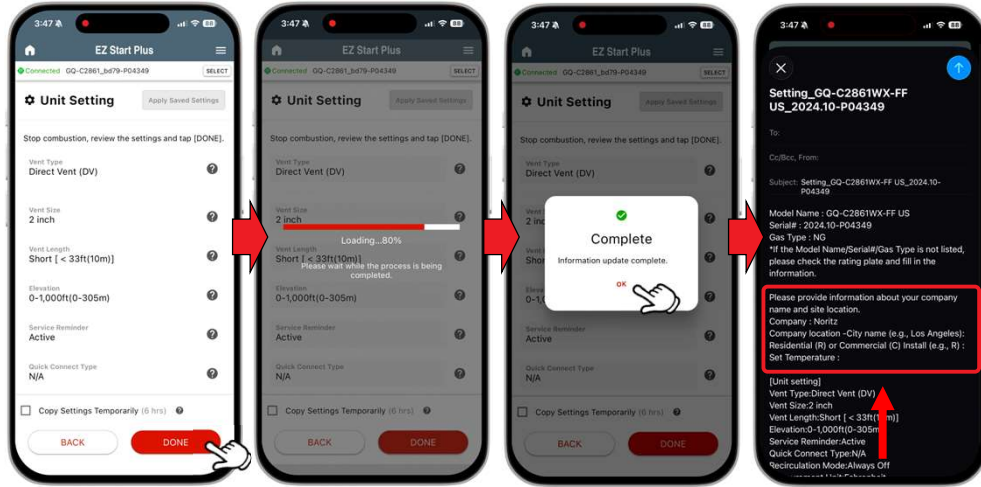Tap "?" To get additional information on setting

Tap OK to Close

12

UNIT SETTINGS

Upon completion, email app will open to allow emailing the installation settings to Noritz. This is not required, but very helpful for Customer Care.

Review your selections then tap DONE
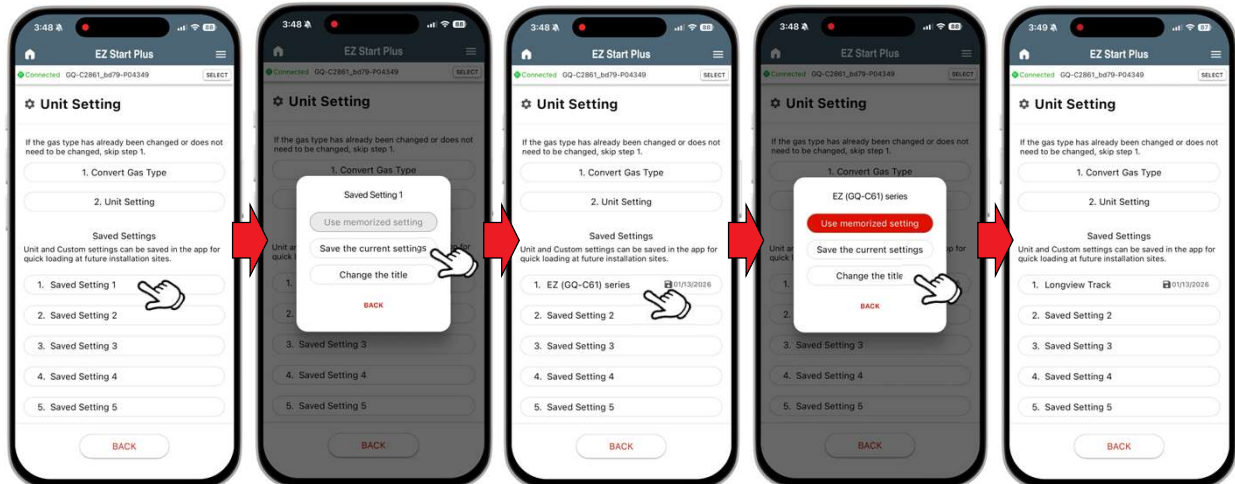
App programs unit

Tap OK when complete

Please fill out these items if you opt in to send

Scan Here!

If you check the Copy Settings Temporarily, you can use the Apply Saved Settings for 6 hours.

N NORITZ®

13

N NORITZ®

SAVED SETTINGS

Tap "Saved Setting 1"

Tap "Save the current settings"

The App will save model name and date in title

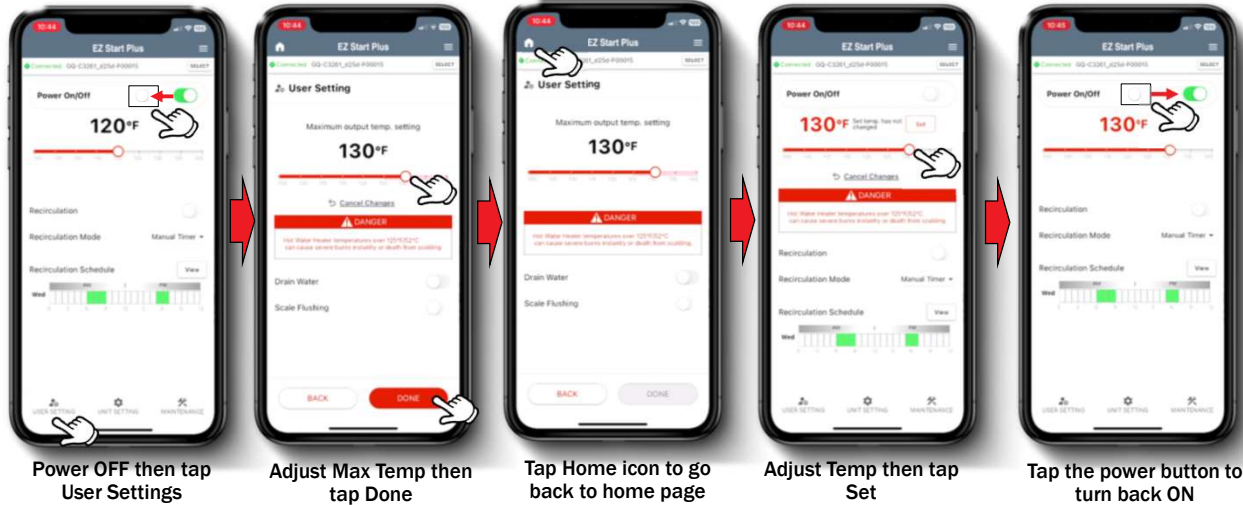**To rename title Tap "Change the title"**

Type in name you want to reference the settings

14

USER SETTINGS

Residential units are limited to 120 by default but they can be bypassed following these steps.
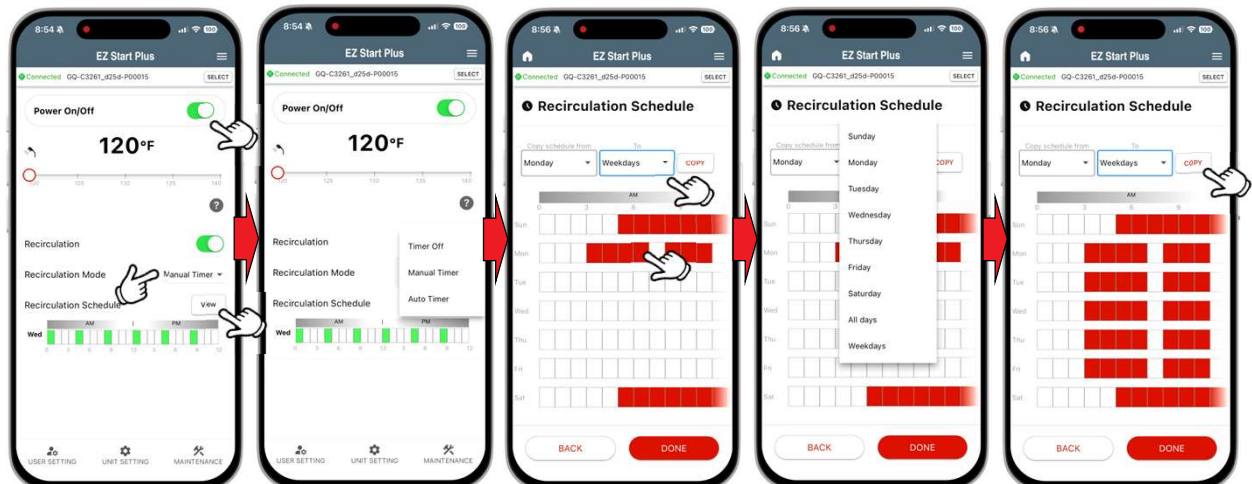
Adjusting the maximum output temperature settings

| Power OFF then tap User Settings | Adjust Max Temp then tap Done | Tap Home icon to go back to home page | Adjust Temp then tap Set | Tap the power button to turn back ON |

User Setting have a Drain Water and Scale Flushing Feature

NORITZ®

RECIRC TIMER SETTINGS

| On Home page Tap "Recirculation Mode" | Select Type of Recirculation Mode*

 The "View" button shows the schedule | Highlight the times you want recirculation running in RED

 *Only NRCR will list Auto Timer | Each day can be different, or you can copy from another day Tap "Copy" | Tap "DONE" to save |

NORITZ®

ERROR CODE HISTORY

N NORITZ®

Error history can be displayed, and content can be emailed to Noritz Customer Care.

Tap on the error code to link to the Noritz web site. Detailed error code info displayed.

Shows the number of days elapsed since the error was reported.

Tap the email icon to launch the email app to send data to Noritz Customer Care.
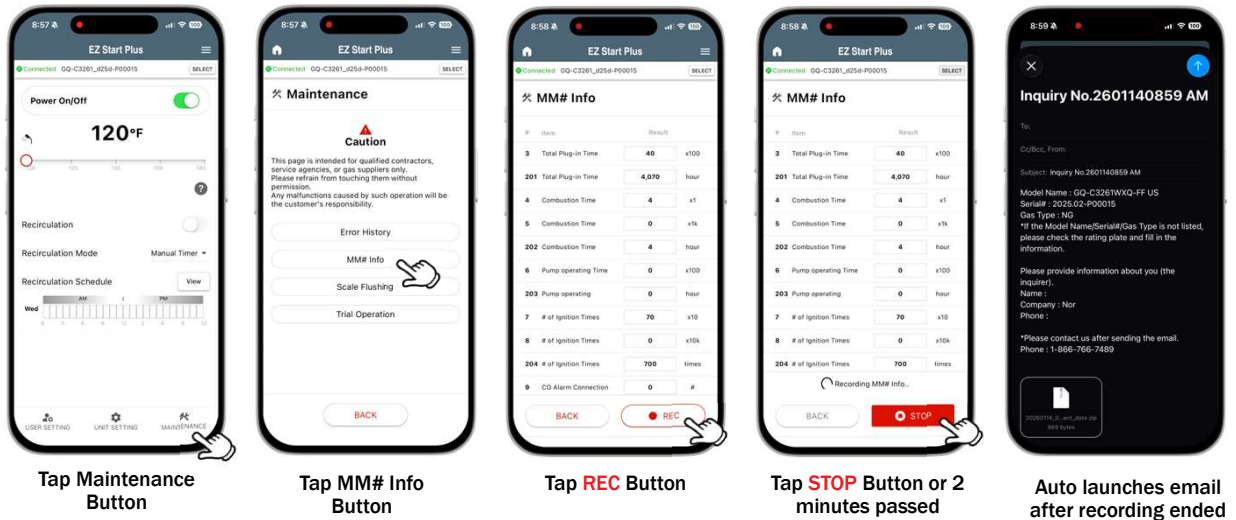

Tap Maintenance Button

Tap Error History Button

Tap the phone # to launch the phone app and call Noritz.
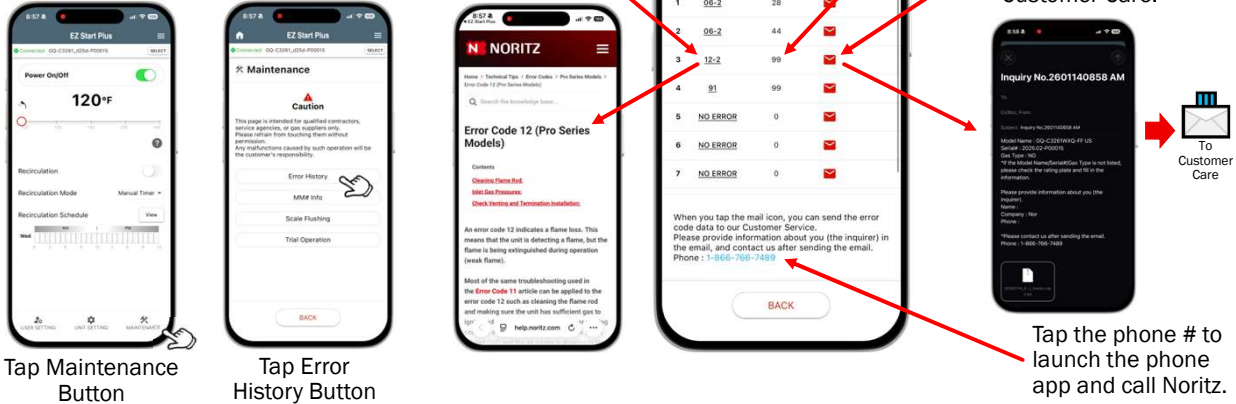
17

MAINTENANCE MONITORS

N NORITZ®

You can check and record up to 2 minutes of Maintenance Monitor data and send to Noritz Customer Care.

Tap Maintenance Button

Tap MM# Info Button

Tap REC Button

Tap STOP Button or 2 minutes passed

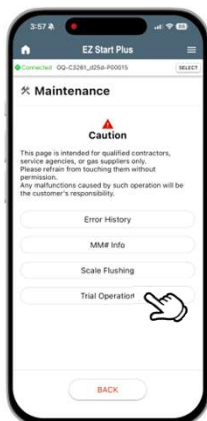**Auto launches email after recording ended**

18

TRIAL OPERATION

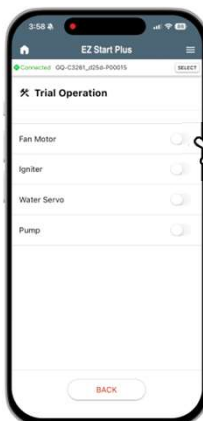Depending on the unit you can do a trial operation on:
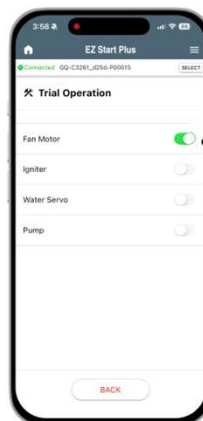Fan Motor, Igniter, Water Servo, Pump (NRCR only), or Bypass Servo (CDV only)

| Tap Maintenance Button | Tap Trial Operation Button | Select Part for Trial Operation | Tap Toggle Button to turn ON | Tap Toggle Button to turn OFF |

HELPFUL LINKS

866-7NORITZ (866-766-7489)
- Monday – Friday: 5am to 5pm PST
- Saturday: 6am to 3pm PST

EZ Start Plus App   Gas Conversion

SUPPORT.NORITZ.COM   NORITZ.COM/TECHTIPS   HELP.NORITZ.COM   TRAINING.NORITZ.COM   YOUTUBE.COM/NORITZAMERICA   PROCARD.NORITZ.COM

NORITZ